

WORKSHOP EMERGENCY STOP SYSTEM

The workshop equipment is controlled by an emergency stop system. The system has three stop button positions and controls all the workshop power. This system does not affect the lighting or the kitchen power.

The stop buttons are installed in three positions, one on each side wall and one at the exit door. The buttons are red with a yellow base and are mounted higher than the normal power points to make them more visible and to avoid accidental operation.

The stop buttons are large and are designed to be pushed firmly with palm or fingers. The buttons lock in the off position when pushed and can be reset by turning in direction of the arrow on the button. Pushing any button will isolate all the workshop power.

USING THE SYSTEM

The stop system should only be used in an emergency such as a person with clothes or part of body trapped in a machine, or a machine out of control such as a hand held drill with the trigger locked. Or any other emergency requiring quick action. Do not be afraid to use the system it may avoid serious injury.

Once the system has been activated it must not be reset until the emergency has been dealt with and it is safe to do so. All workshop users must be informed that the power will be restored. If the system has been activated by accident all users must be informed before restoring power. The last person to leave the premises should press the button at the door to isolate all machines for safety. And the first person to open up should reset it on entering the premises.